

Horizon Digital Combination Locks

4 DIGIT CODES

Play Instructional Video 

Public Mode

Lock

ENTER USER CODE
(4 DIGITS)



CONFIRM CODE
(4 DIGITS)



PUSH IN HANDLE
TO LOCK



ERROR
TRY AGAIN

Unlock


USER OR MASTER
CODE



HANDLE
POPS-OUT
TURN HANDLE
TO OPEN

Emergency Key Override

INSERT MASTER KEY OVERRIDE & TURN 90°
EITHER CLOCKWISE OR ANTI-CLOCKWISE

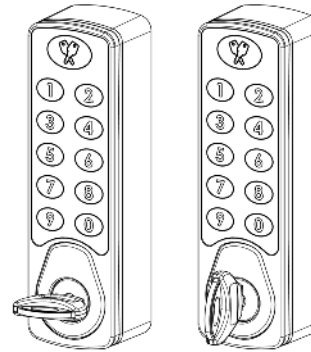

TURN KEY BACK 90° TO ORIGINAL
POSITION & REMOVE FROM LOCK

Error



Errors will time-out after 4 seconds.
Unfinished instructions will time-out after 4
seconds. Always wait for LED lights to finish
before pressing next key.



LYON[®]