


ASSEMBLY ASSISTANCE?


Contact us direct for fast friendly service (800) 433-8488 Int'l calls (630) 892-8941 | WEB: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681




BASE UNIT INSTALLATION

DETERMINE STARTING POINT AND LEVEL FIRST UNIT

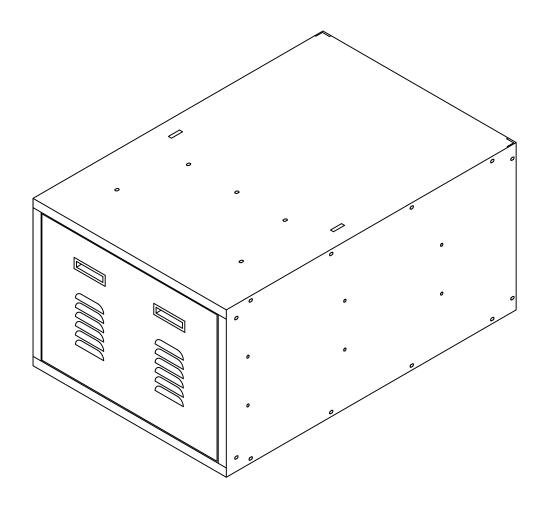


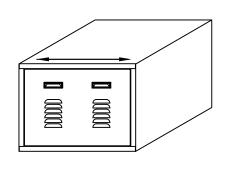

LEVEL ACROSS FRONT OF UNIT

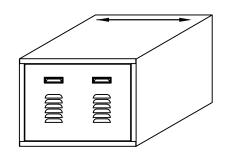

LEVEL ACROSS

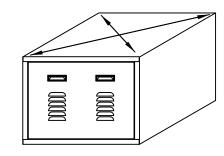

DOUBLE CHECK BACK OF UNIT ACROSS DIAGONALS

SHEET 2 OF 8

MISSING PARTS OR IN NEED ASSEMBLY ASSISTANCE?


Contact us direct for fast friendly service (800) 433-8488 Int'l calls (630) 892-8941 | WEB: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681

INSTALLATION INSTRUCTIONS FOR VALOR LOCKERS




BASE UNIT INSTALLATION

MAKE SURE THE UNIT IS SQUARE BY ONE OF THE TWO FOLLOWING METHODS:

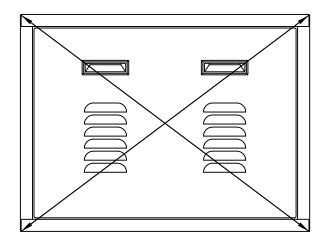

MEASURE ACROSS DIAGONALS

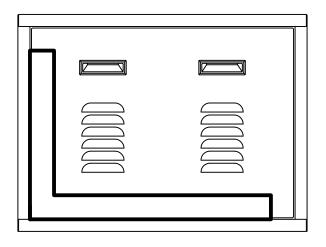

USE FRAMING SQUARE

ANCHOR UNIT TO BASE AND TO WALL TO KEEP UNIT SQUARE FOR REMAINDER OF INSTALL


SHEET 3 OF 8

MISSING PARTS OR IN NEED OF ASSEMBLY ASSISTANCE?

Contact us direct for fast friendly service (800) 433-8488 Int'l calls (630) 892-8941 | WEB: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681

INSTALLATION INSTRUCTIONS FOR VALOR LOCKERS



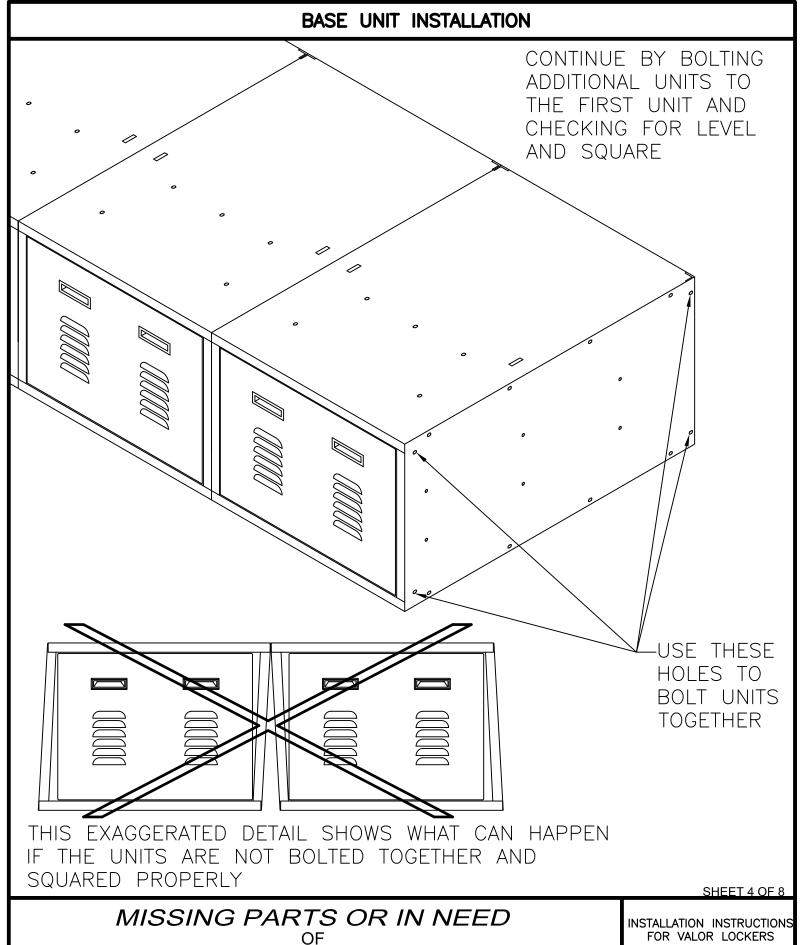


ASSEMBLY ASSISTANCE?

Contact us direct for fast friendly service (800) 433-8488 Int'l calls (630) 892-8941 | WEB: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681



DRAWER REMOVAL & INSTALLATION

REMOVE THE TWO RETAINING SCREWS HOLDING DRAWER TO SLIDES IN ORDER TO REMOVE THE DRAWER FROM CASE. THEN PROCEED TO LIFT OUT DRAWER.

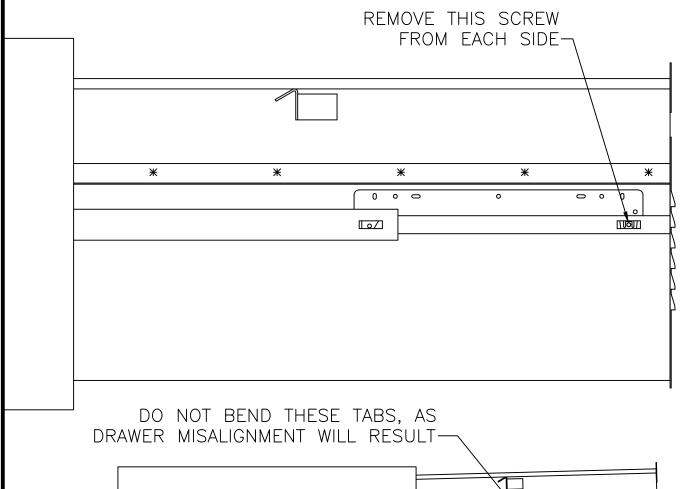

TO INSTALL DRAWER:

PLACE DRAWER BODY ON TOP OF DRAWER SLIDES WITH THE REAR OF THE DRAWER INSIDE THE DRAWER CASE. MOVE ONE SLIDE TO MATCH UP TO THE RAIL ON THE DRAWER AND DROP THE REAR OF THE DRAWER INTO THE SLOT. MATCH UP THE OTHER REAR SIDE AND THEN DROP THE FRONT OF THE DRAWER DOWN INTO THE FRONT SLOTS. REINSTALL RETAINING SCREWS.

MISSING PARTS OR IN NEED OF ASSEMBLY ASSISTANCE?


Contact us direct for fast friendly service (800) 433-8488 Int'l calls (630) 892-8941 | WEB: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681

INSTALLATION INSTRUCTIONS FOR VALOR LOCKERS

SHEET 5 OF 8



UPPER UNIT INSTALLATION

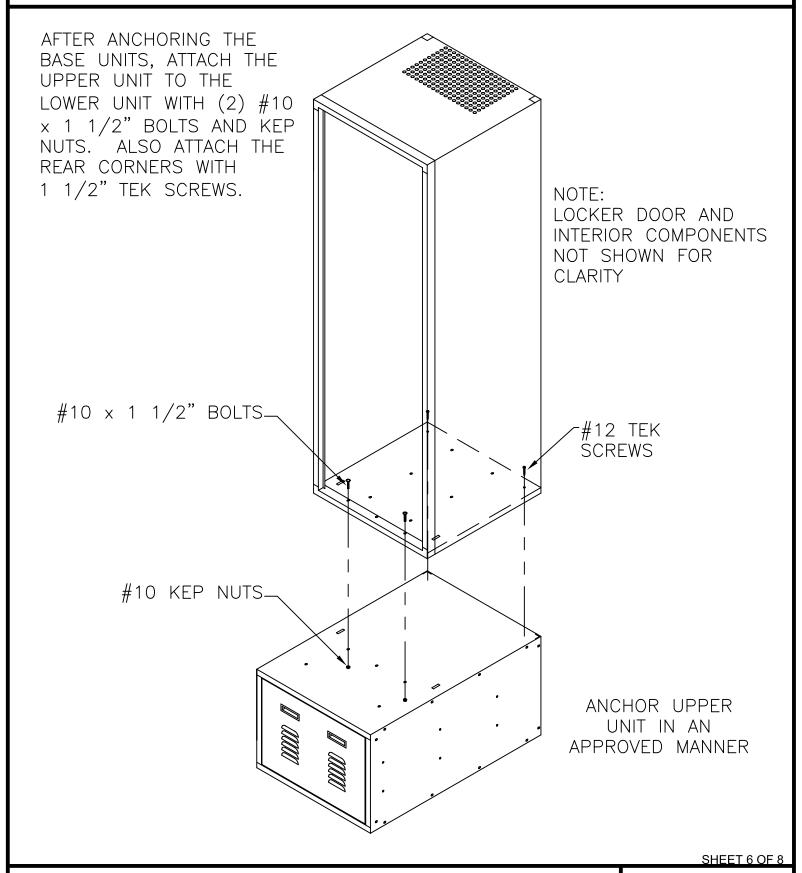


MISSING PARTS OR IN NEED OF ASSEMBLY ASSISTANCE?

Contact us direct for fast friendly service (800) 433-8488 Int'l calls (630) 892-8941 | WEB: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681

INSTALLATION INSTRUCTIONS FOR VALOR LOCKERS



DRAWER LATCH ASSEMBLY

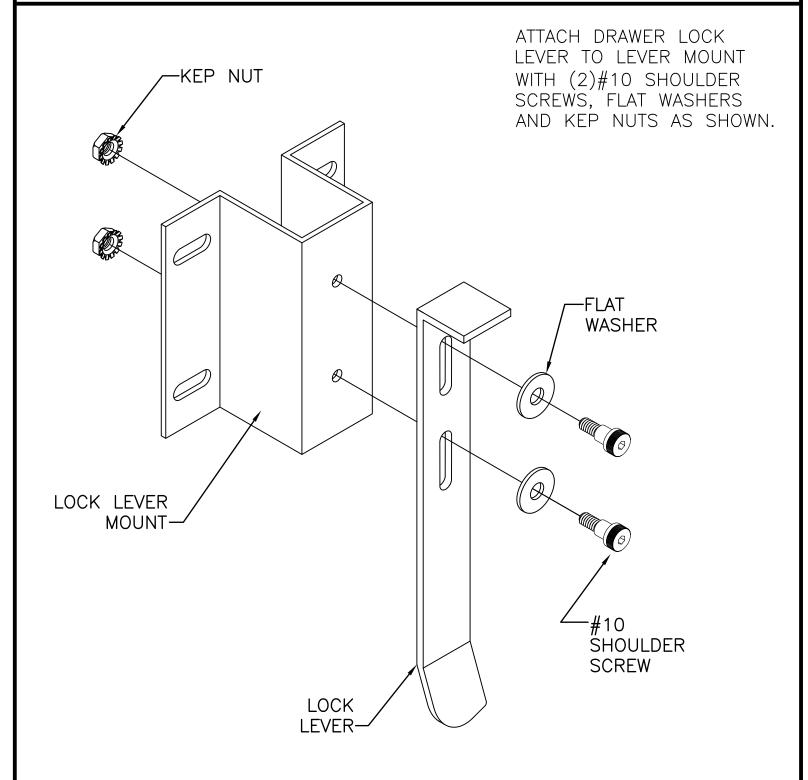

SHEET 7 OF 8


MISSING PARTS OR IN NEED OF ASSEMBLY ASSISTANCE?

Contact us direct for fast friendly service (800) 433-8488 Int'l calls (630) 892-8941 | WEB: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681

INSTALLATION INSTRUCTIONS FOR VALOR LOCKERS



DRAWER LATCH INSTALLATION

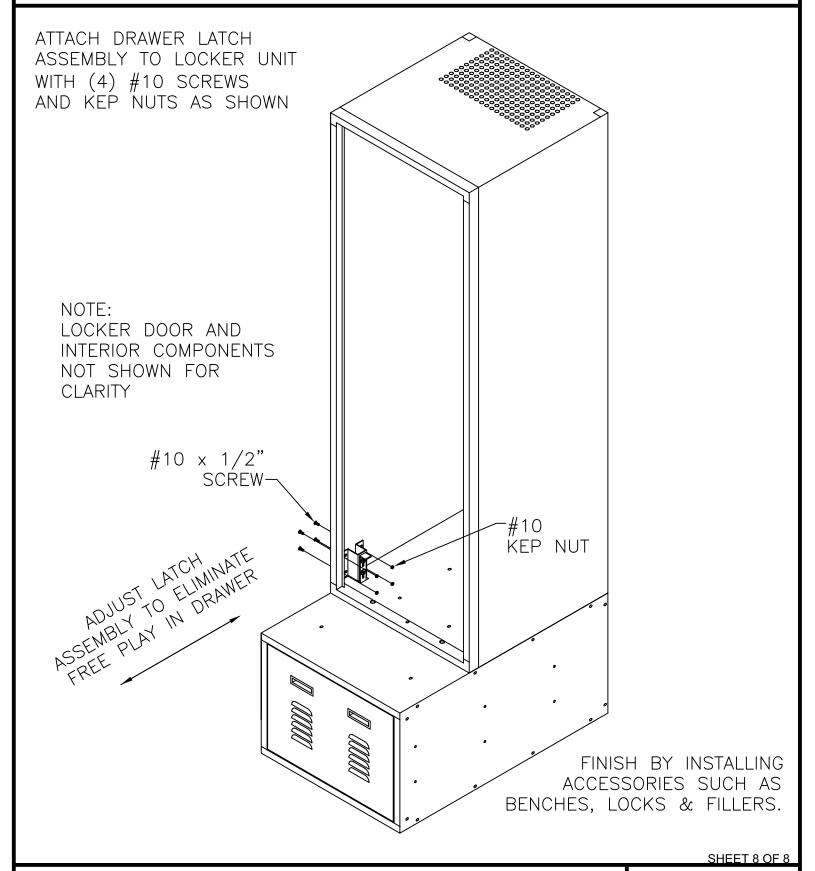

MISSING PARTS OR IN NEED OF ASSEMBLY ASSISTANCE?

Contact us direct for fast friendly service (800) 433-8488 Int'l calls (630) 892-8941 | WEB: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681

INSTALLATION INSTRUCTIONS FOR VALOR LOCKERS

