


### STEP 4 - CABINET WIDTH

Determine the cabinet width from the selection to the right. Add this selection to the developing item number.

**Example - DDM3530** \_ \_ \_ \_ \_

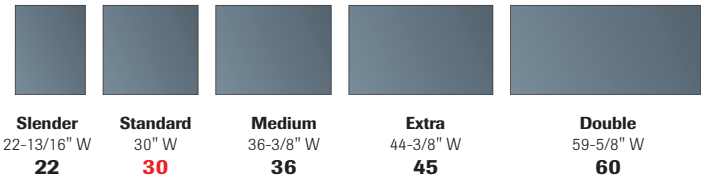

### STEP 5 - CABINET DEPTH

Include cabinet depth in the developing item number by adding 30. All cabinets are 28-1/4" deep.


**Example - DDM353030** \_ \_ \_ \_ \_



### STEP 6 - CABINET BASE

Determine base requirement. Use either a B to include a base at the bottom of the cabinet or a N for no base. Note: always choose a base except for mobile or overhead units.


**Example - DDM353030B** \_ \_ \_ \_ \_

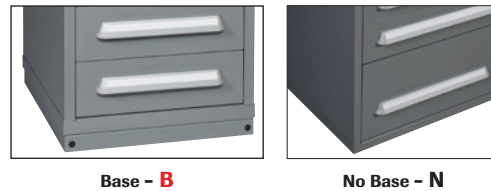

### STEP 7 - CABINET STACKING HOLES

Contact Lyon customer service if stacking holes are needed. If holes are not necessary, use N, for no stacking holes.

**Example - DDM353030BN** \_ \_ \_ \_ \_

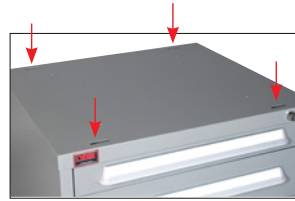

### STEP 8 - CABINET HOUSING REINFORCEMENT

Contact Lyon customer service if housing reinforcements are needed. If reinforcements are not necessary, use N, for no housing reinforcement.

**Example - DDM353030BNN** \_ \_

### STEP 9 - CABINET DOORS

Contact Lyon customer service if a cabinet door is needed. If a door is not necessary, use N, for a no cabinet door.

**Example - DDM353030BNNN** \_

### STEP 10 - CABINET LOCK

Use either; N for No lock, L for standard lock, or 1 for keyed alike.

**Example - DDM353030BNNNL**

*Note: For a complete housing item number it must consist of 14 digits comparable to the example above.*