


### STEP 3 - DRAWER HEIGHT

Determine the drawer height from the selection to the right. Decide the drawer height by measuring the height of the products being stored. Add this selection to the developing item number. *Note: The total of the drawer numbers must add up to the housing number.*

**Example - DDM0530** \_\_\_\_\_

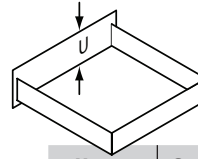

### STEP 4 - DRAWER WIDTH

Include the same drawer width digits in the item number that were selected in the housing selection.

**Example - DDM0530** \_\_\_\_\_

### STEP 5 - DRAWER DEPTH

Include drawer depth in the developing item number by adding 30. All drawers are 28-1/4" deep.

**Example - DDM053030** \_\_\_\_\_

### STEP 6 - LATCH-IN/LATCH-OUT

Determine if a Latch-in/Latch-out mechanism is desired. Use either; **N** for No, and **L** for Yes.

**Example - DDM053030N** \_\_\_\_\_

### STEP 7 - INDIVIDUAL DRAWER LOCKS

Determine locking system. Use either; **N** for No locking system, **L** for standard locking system, or **1** for keyed alike.

**Example - DDM053030NN** \_\_\_\_\_

### STEP 8 - LAYOUT KIT

Determine if a layout kit is desired. If no layout kit is needed, use **00** for No. If a layout kit is desired, choose from layout kits on pages 16-17, 23, 26, 30-31, 34-35. Add the digits from the selected layout kit.

**Example - DDM053030NN0C** \_\_\_\_\_

### STEP 9 - LAYOUT KIT INSTALLED

Select the layout kit installation. Use either; **I** for Installed Kit, **K** for Kitted Kits, or **0** for No Kits.

**Example - DDM053030NN0CI**

*Note: For a complete drawer item number it must consist of 14 digits comparable to the example above.*


USABLE HEIGHT "U"	CAT. NO. SLENDER WIDTH	CAT. NO. STANDARD WIDTH	CAT. NO. MEDIUM WIDTH	CAT. NO. EXTRA WIDTH	CAT. NO. DOUBLE WIDTH
2-1/4"	0422	0430	0436	0445	0460
3"	0522	<b>0530</b>	0536	0545	0560
3-7/8"	0622	0630	0636	0645	0660
4-5/8"	0722	0730	0736	0745	0760
5-3/8"	0822	0830	0836	0845	0860
6-1/4"	0922	0930	0936	0945	0960
7"	1022	1030	1036	1045	1060
7-3/4"	1122	1130	1136	1145	1160
8-1/2"	1222	1230	1236	1245	1260
9-3/8"	1322	1330	1336	1345	1360
10-1/8"	1422	1430	1436	1445	1460
10-7/8"	1522	1530	1536	1545	1560
11-3/4"	1622	1630	1636	1645	1660
12-1/2"	1722	1730	1736	1745	1760
13-1/4"	1822	1830	1836	1845	1860



#### Lath-in/Latch Out

- Secures drawers in fully-closed position until latch is released
- Allows drawers to remain fully-opened until latch is released

**Standard Width Layout Kit** - page 16  
9 compartments - **OC**

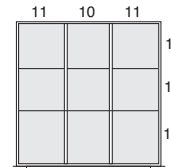

**Layout Kit Installed**