

WIRE SHELVES WITH CLOSED BACKS


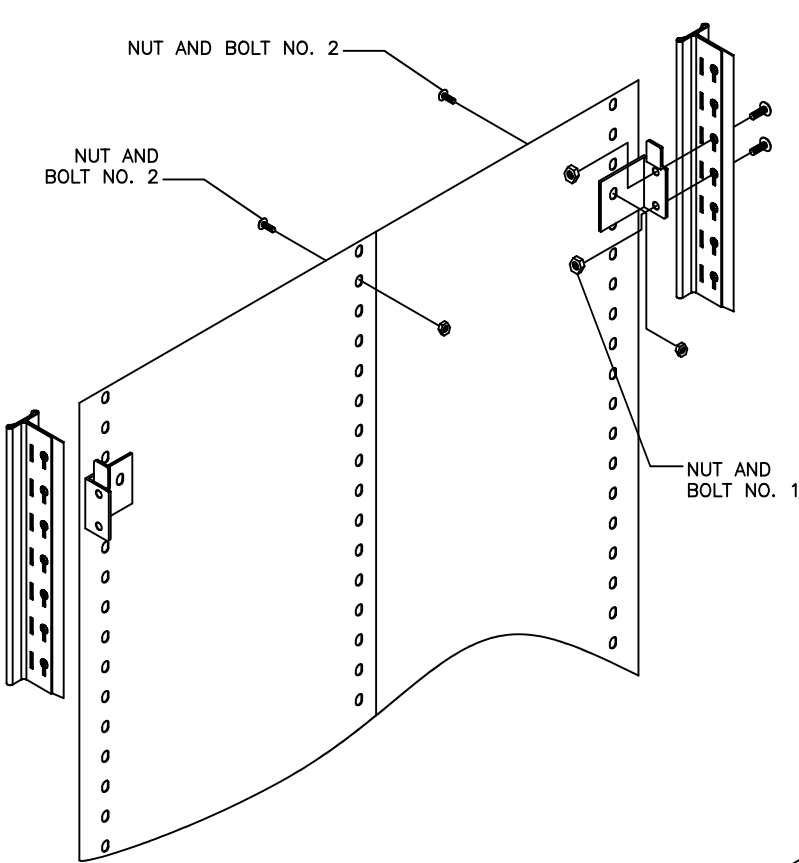



FIGURE 1

1. ATTACH THE REAR SHELF CLIPS IN THE DESIRED LOCATIONS WITH NUTS AND BOLTS.
2. ATTACH THE BACK TO THE CLIPS WITH NUTS AND BOLTS.
3. JOIN THE HALVES OF THE BACK WITH NUTS AND BOLTS NEAR THE TOP, MIDDLE, AND BOTTOM OF THE SECTION.
4. INSTALL THE FRONT SHELF CLIPS IN THE DESIRED LOCATIONS.
5. INSTALL THE SHELVES.

HARDWARE

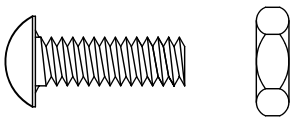

BOLT AND NUT NO. 1
5/16"–18 X 5/8"
ROUND HEAD



BOLT AND NUT NO. 2
1/4"–20 X 1/2"
TRUSS HEAD

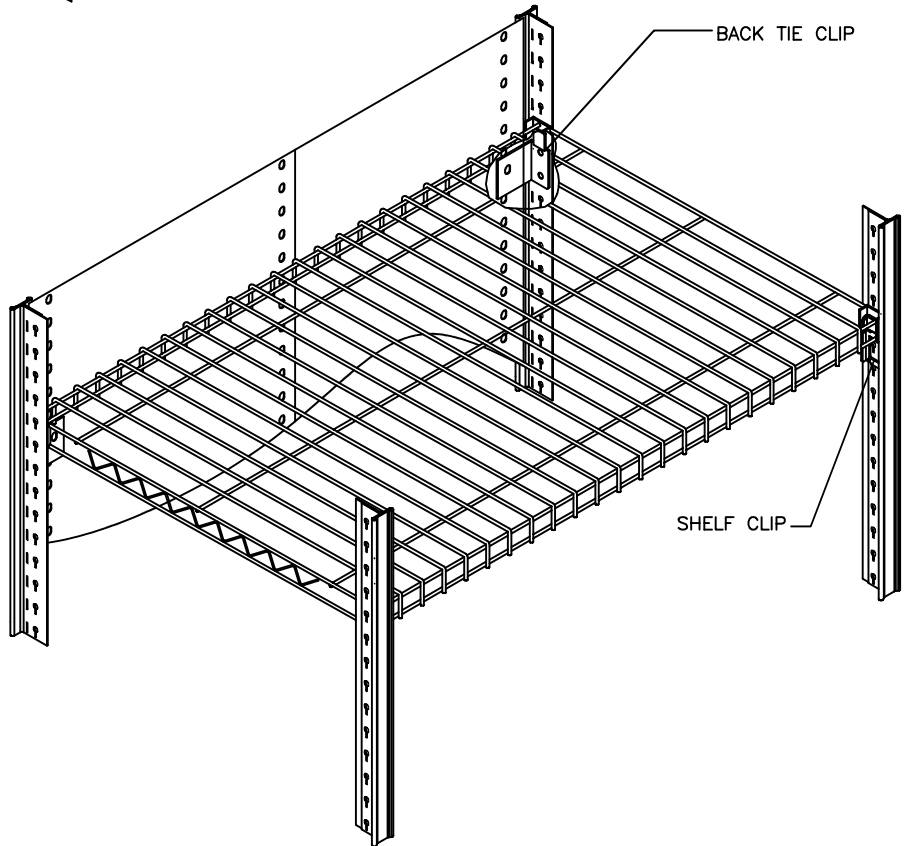


FIGURE 2

E-011030-1
11-16-01

**MISSING PARTS OR IN NEED
OF
ASSEMBLY ASSISTANCE?**

Contact us direct for fast friendly service (800) 433-8488

Int'l calls (630) 892-8941 | WFR: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681

ASSEMBLY INSTRUCTIONS
FOR LYON WIRE SHELVES
WITH CLOSED BACKS

LYON LYON WORKSPACE PRODUCTS
P.O. BOX 671
AURORA, IL 60507

10213-AA
SHEET 1 OF 1