
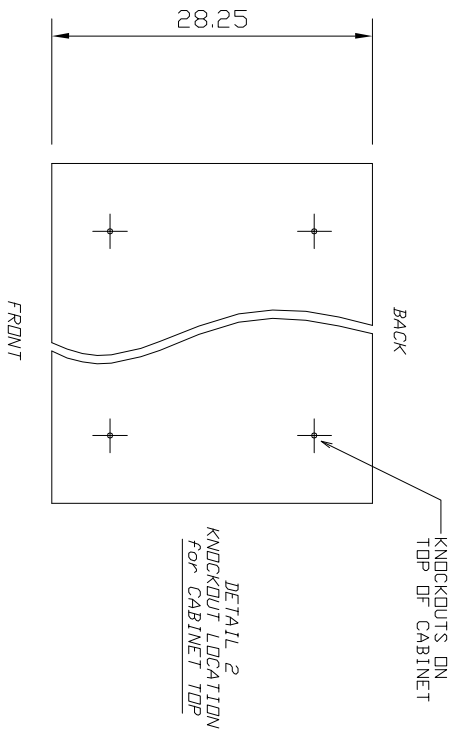
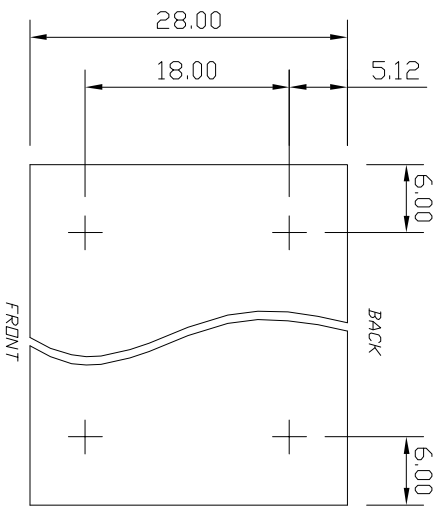


# INSTALLATION OPERATIONS

1. REFER TO OWNERS MANUAL FOR CABINET INSTALLATION AND ANCHORING.
2. PILOT HOLES MUST BE DRILLED INTO THE HARDWOOD TOP. DRILL FOUR (4) 13/64" DIAMETER HOLES ONE INCH (1") DEEP PER DETAIL 1.
3. KNOCKOUT HOLES ARE PROVIDED ON THE TOP OF THE CABINET. PUNCH THESE OUT WITH A SCREWDRIVER OR OTHER TOOL.
4. BEFORE SECURING THE HARDWOOD TOP TO THE CABINET TOP, REMOVE SUFFICIENT DRAWERS AND CARRIER ASSEMBLIES. MARK SPECIFIC LOCATIONS OF THE DRAWERS AND CARRIERS FOR REINSTALLATION.
5. ATTACH THE HARDWOOD TOP TO THE CABINET TOP WITH THE SUPPLIED FOUR (4) 1/4" x 1" LONG LAG SCREWS AND 1/4" PLAIN WASHERS. BE SURE TO LUBRICATE THE THREADS OF THE LAG SCREWS TO ASSURE EASIER TIGHTENING. REPLACE DRAWERS AND CARRIERS INTO SPECIFIC LOCATIONS AND CHECK FOR PROPER DRAWER OPERATION.

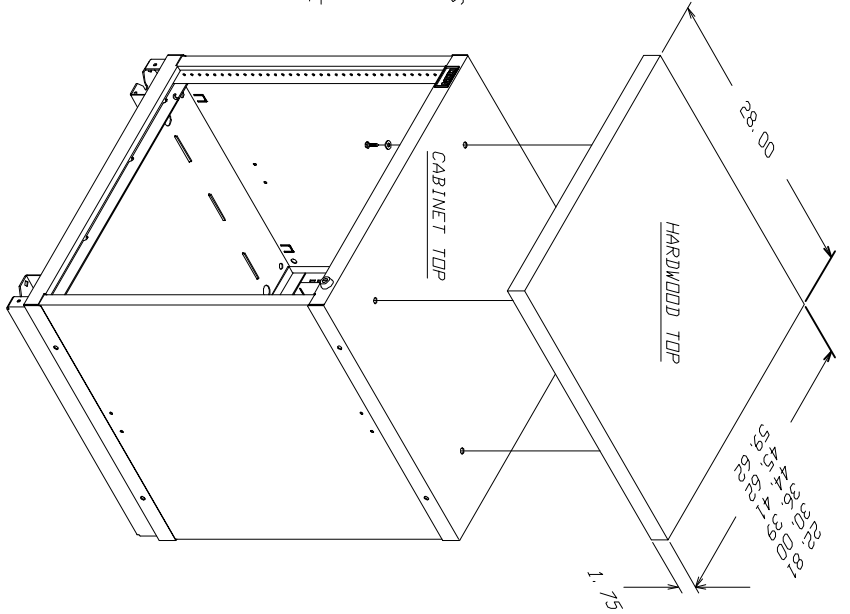

(4) 1/4" FLAT WASHER

(4) 1/4" x 1" HEX HEAD LAG SCREW

**SUPPLIED FASTENERS**

<p><b>LYON</b> P.O. Box 671 AURORA, IL 60507-0671 PHONE: 630-892-8841 FAX: 800-287-4681</p>		
<p>NOTICE: THIS IS A CONFIDENTIAL DISCLOSURE LOANED BY LYON WORKSPACE FOR REFERENCE PURPOSES ONLY</p>		
DATE	DRAWN BY	CHECKED BY
01-19-12	JR	DWV
DESCRIPTION		
INSTALLATION HARDWOOD TOP MDC		
SHEET	DRAWING NUMBER	REV
-	5171-DA	5