


## INSTALLATION OPERATIONS

1. REFER TO OWNERS MANUAL FOR CABINET INSTALLATION AND ANCHORING.
2. KNOCKOUT HOLES ARE PROVIDED ON THE TOP OF THE CABINET. PUNCH THESE OUT WITH A SCREWDRIVER OR OTHER TOOL.
3. BEFORE SECURING THE STEEL RETAINER TOP TO THE CABINET TOP, REMOVE SUFFICIENT DRAWERS AND CARRIER ASSEMBLIES. MARK SPECIFIC LOCATIONS OF THE DRAWERS AND CARRIERS FOR REINSTALLATION.
4. ATTACH THE STEEL RETAINER TOP TO THE CABINET TOP WITH THE SUPPLIED FOUR (4) 1/4-20x3/4 SCREWS, FLAT WASHERS AND 1/4-20 FLANGE LOCKNUTS. REPLACE DRAWERS AND CARRIERS INTO SPECIFIC LOCATIONS AND CHECK FOR PROPER DRAWER OPERATION.
5. FINISH INSTALLATION BY PLACING THE VINYL MAT INTO THE STEEL RETAINER TOP.

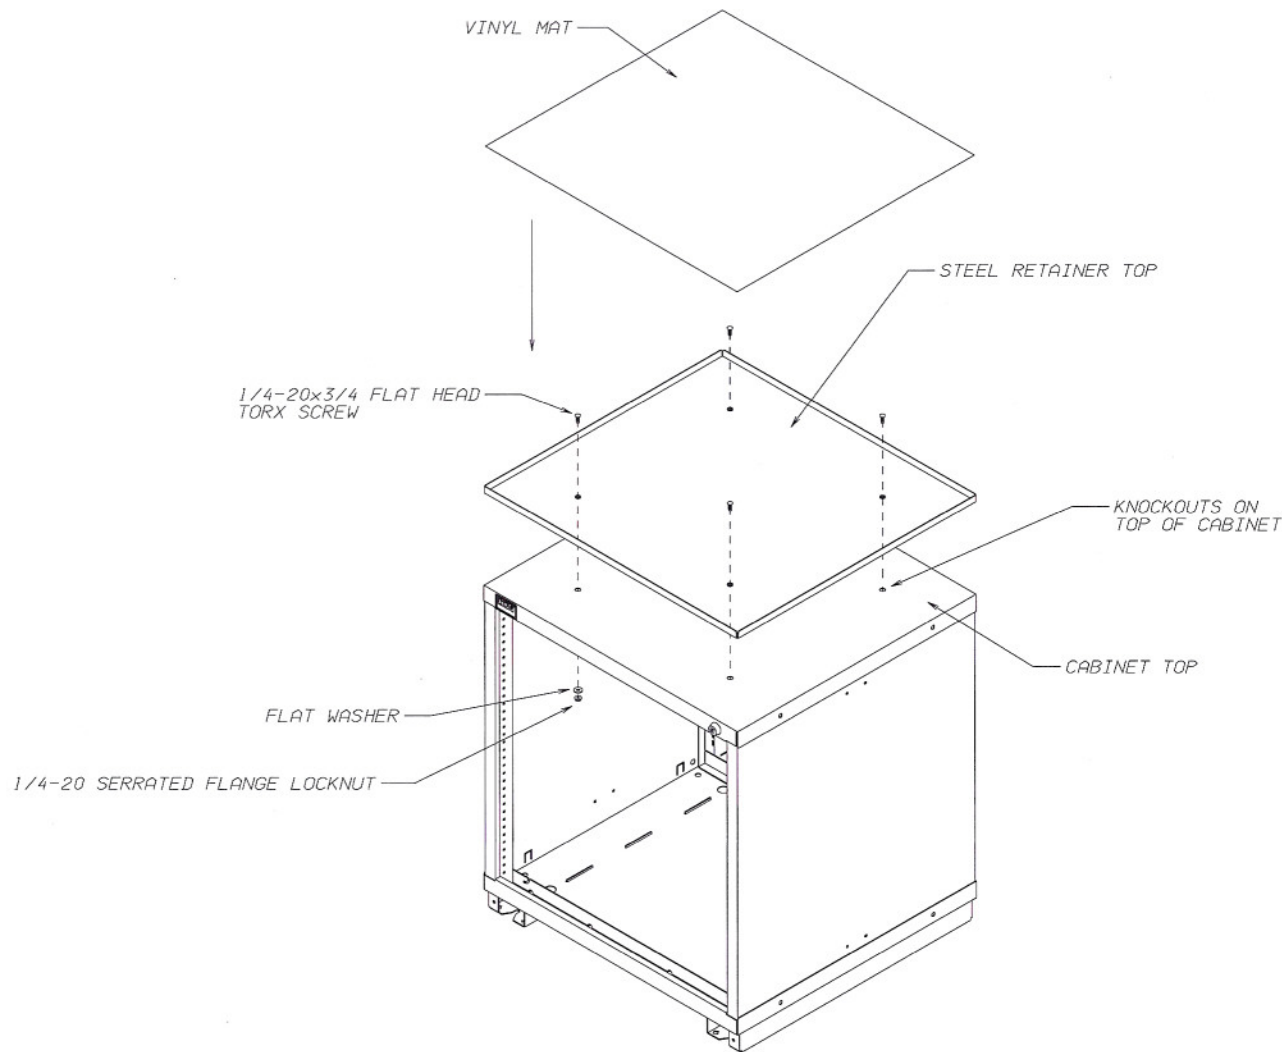

(4) 1/4" FLAT WASHER



1/4-20 x 3/4" T20 TORX FLAT  
HEAD THREAD CUTTING SCREW



1/4-20 HEX HEAD SERRATED  
FLANGE LOCKNUT

**SUPPLIED FASTENERS**

SYM	REL FOR PROD	0503	05-26-09	RE
	REVISION	ECN	DATE	BY
NOTES:				
1) ALL DIMENSIONS ARE INCHES				
2) TOLERANCES (UNLESS OTHERWISE NOTED)				
DECIMAL: .XX = ±.03				
.XXX = ±.015				
ANGULAR: = ±1°				
3) REMOVE ALL SHARP EDGES AND BURRS				
MATERIAL				
---				
RAW P/N	WEIGHT(LB)	FINISH:		
103637	---	---		
DATE	REDRAWN BY	CHECKED BY		
05-26-09	RE	DV		
<b>LYON</b>				
LYON METAL PRODUCTS PO BOX 671 AURORA, IL 60507 (800) 323-0082 FAX: (800) 367-6681				
MDC	DESCRIPTION			
	INSTALL - STEEL RETAINER TOP			
SHEET	DWG NUMBER	REV		
	<b>SS1428</b>	1		

NOTICE: THIS IS A CONFIDENTIAL DISCLOSURE. LOANED BY LYON METAL PRODUCTS FOR REFERENCE PURPOSES ONLY