


BIN FRONT 3" HIGH X 36" & 42" WIDE

BIN FRONTS ARE ATTACHED TO THE FRONT FLANGE OF SHELVES AS SHOWN.

TO PLACE THE BIN FRONT IN POSITION FOR BOLTING TO SHELF, HOLD IT AS INDICATED BY THE DOTTED LINES AND SWING IT DOWN INTO PLACE. THEN SCREW IT TO THE SHELF FLANGE USING (3) 5/16"-12 X 1/2" SMS SPEC HEAD SCREWS.

NOTE:

A SHELVING LABELHOLDER MAY BE ATTACHED TO A 3" BINFRONT. IT MAY BE BOLTED TO THE BINFRONT OR ATTACHED WITH SPRING FASTENERS.

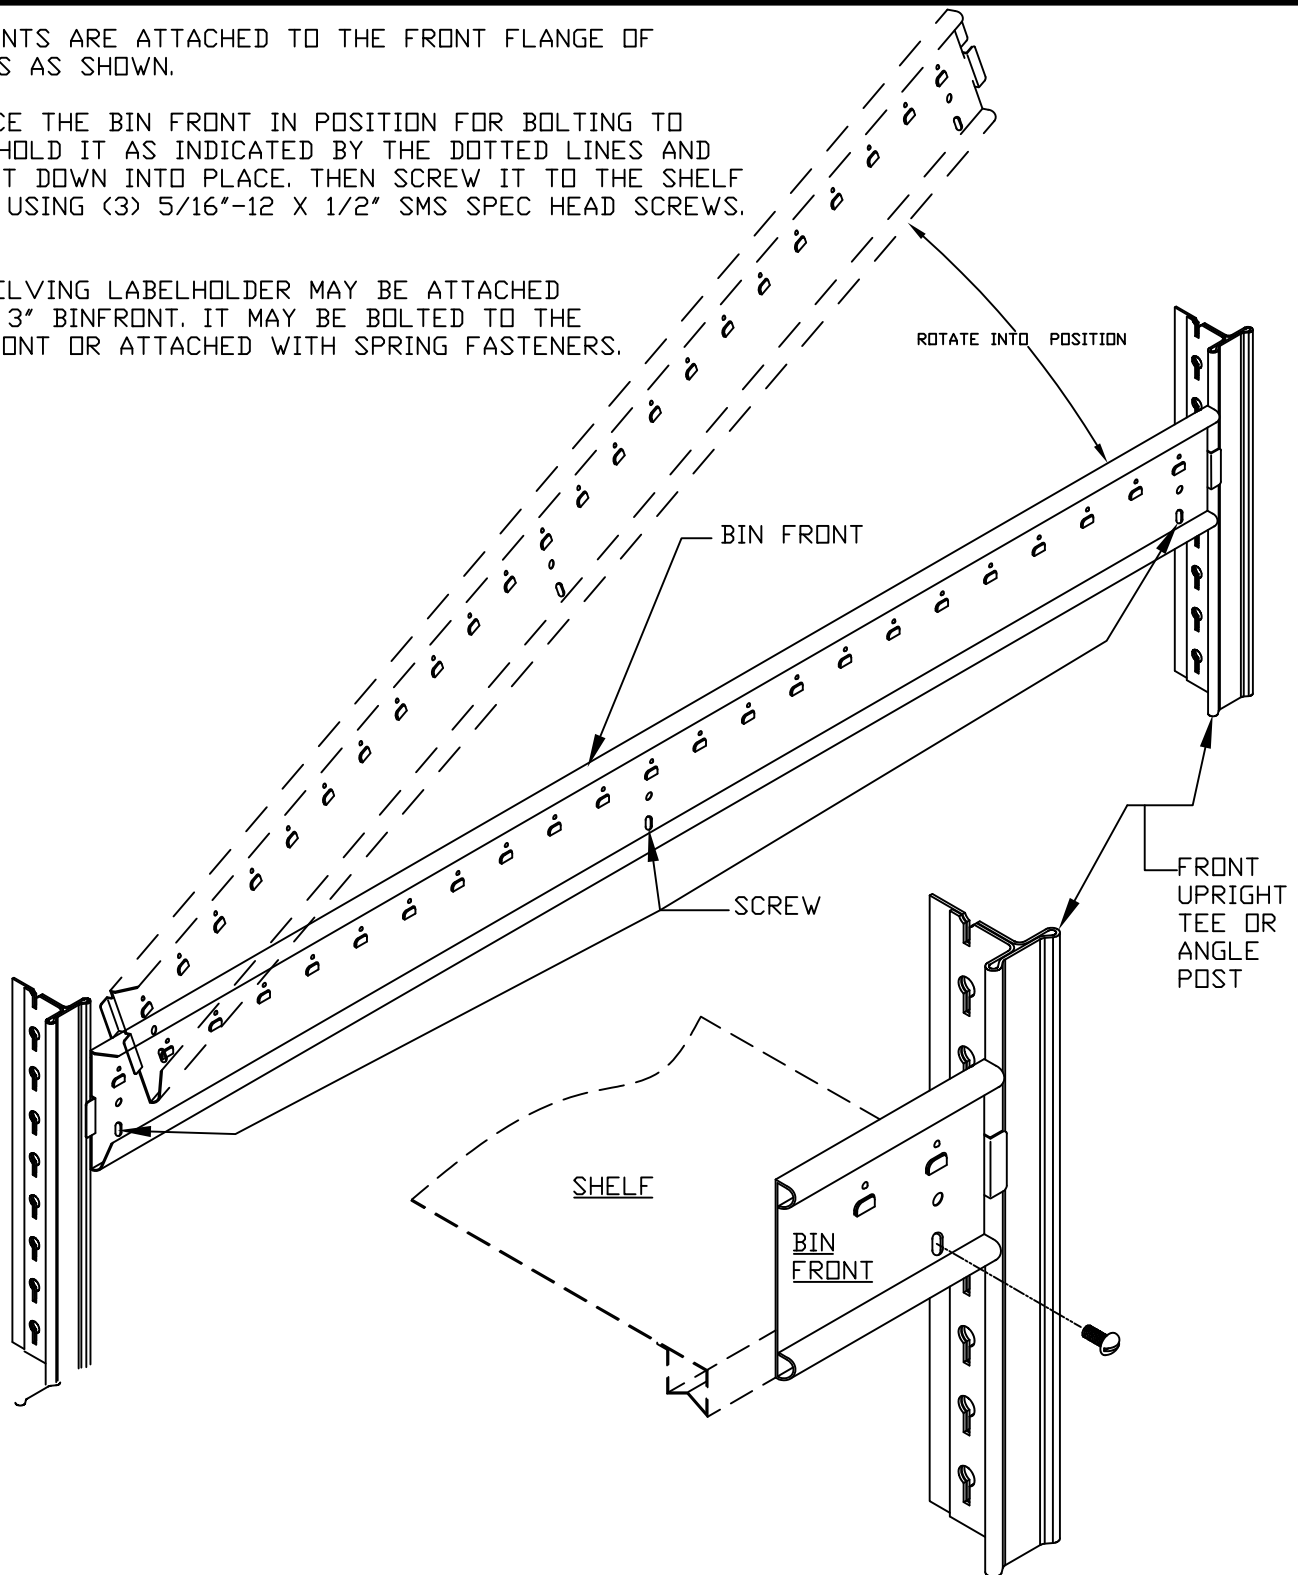

SHEET 1 OF 1

**MISSING PARTS OR IN NEED
OF
ASSEMBLY ASSISTANCE?**

Contact us direct for fast friendly service (800) 433-8488

Int'l calls (630) 892-8941 | WEB: WWW.LYONMETAL.COM | Fax (800) 367-6681

ASSEMBLY INSTRUCTIONS
FOR 8000 SERIES
SHELVING

LYON LYON METAL PRODUCTS
P.O. BOX 671
AURORA, IL 60507

8756DA

BIN FRONT
8756 & 8758
3"H X 36 & 42W