


HI-LO BRACKET INSTALL

MEASURE THE HEIGHT OF THE SHORTER CABINET OR PANEL LEG THAT THE WORKBENCH TOP WILL BE ATTACHED TO. LOCATE THE HI-LO BRACKET ON THE TALLER CABINET AS SHOWN AND MARK ON THE CABINET THE LOCATIONS WHERE THE 13/32" DIAMETER HOLES NEED TO BE DRILLED. BE SURE THAT THE HOLE REQUIRED NEAR THE BACK IS 5" FROM THE BACK OF THE CABINET. REMOVE REQUIRED DRAWERS AND CARRIERS AND DRILL TWO HOLES. MOUNT THE HI-LO BRACKET AND BACKUP PLATE WITH SUPPLIED HARDWARE. THE CARRIAGE BOLT SQUARE WILL FIT INTO THE SQUARE CUTOUT IN THE HI-LO BRACKET. TIGHTEN AND REPLACE DRAWERS. ATTACH WORKBENCH TOP TO HI-LO BRACKET.

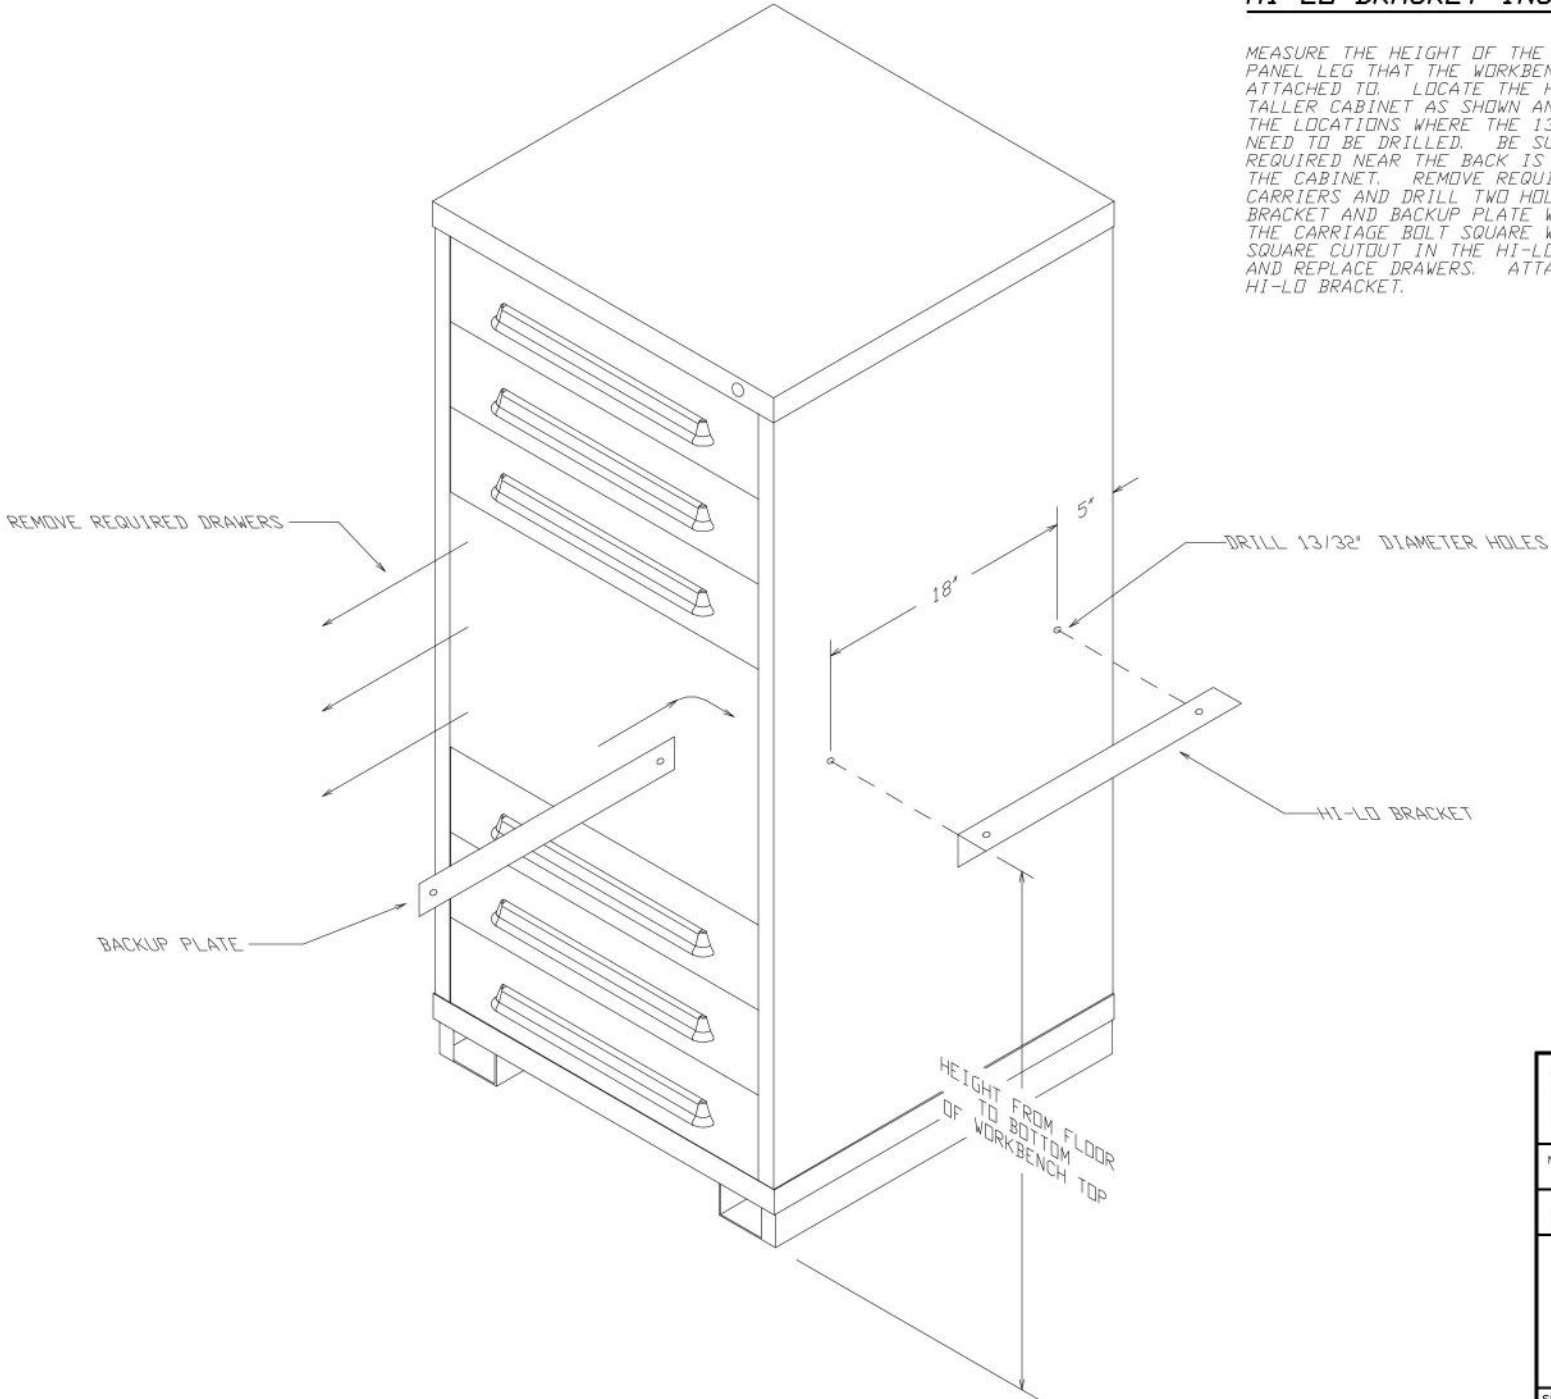

LYON		P.O. Box 671 AURORA, IL 60507-0671 PHONE: 630-892-8941 FAX: 800-367-6681	
		NOTICE: THIS IS A CONFIDENTIAL DISCLOSURE LOANED BY LYON WORKSPACE FOR REFERENCE PURPOSES ONLY	
DATE 01-31-12	DRAWN BY JR	CHECKED BY DWV	
DESCRIPTION			
INSTALLATION HI LO BRACKET MDC			
SHEET -	DRAWING NUMBER SS1549		REV 1