


OPERATION #1

SEE ASSEMBLY INSTRUCTION 9112-CA FOR OTHER ACCESSORIES

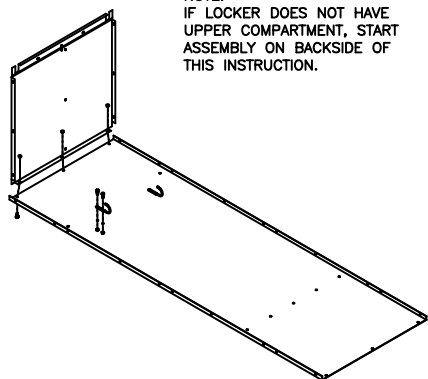


NOTE:
IF LOCKER DOES NOT HAVE
UPPER COMPARTMENT, START
ASSEMBLY ON BACKSIDE OF
THIS INSTRUCTION.

ATTACH HOOKS TO BACK WITH (2) NO. 1
BOLTS AND NUTS

NOTE:
ONLY (1) HOOK REQUIRED ON 18" WIDE
(2) HOOKS REQUIRED ON 21" AND 24" WIDE

FASTEN TOP AND BOTTOM TO BACK
USING NO. 1 BOLTS AND NUTS

OPERATION #2

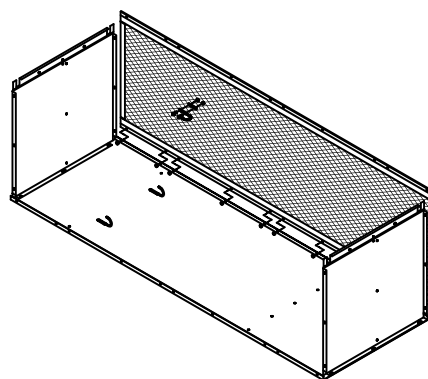


BOLT 2 SIDES TO BACK, TOP, AND BOTTOM
USING NO. 1 BOLTS AND NUTS.

ATTACH HOOK TO SIDE ALIGNED WITH
HOOKS ON BACK. USE (2) NO. 1 BOLTS
AND NUTS WITH A COAT HOOK STRAP ON
THE BACKSIDE AS SHOWN.


NOTE:
FOR SECTIONIZING INFORMATION
REFER TO ASSEMBLY INSTRUCTION
9112-CA

OPERATION #3

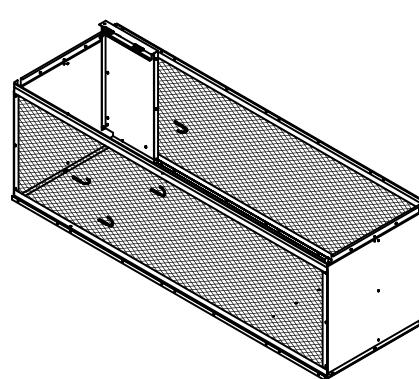

FASTEN UPPER COMPARTMENT HINGE
SIDE TO EXPANDED METAL SIDE USING
(2) NO. 1 BOLTS AND NUTS.

OPERATION #4

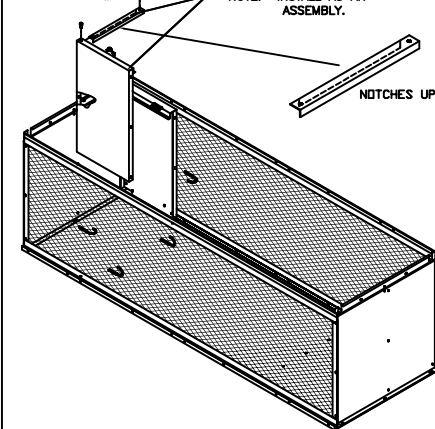


NOTE: INSTALL AS AN
ASSEMBLY.

NOTCHES UP

ASSEMBLE CROSS MEMBER TO UPPER COMPARTMENT
JAMB SIDE WITH (1) NO. 3 BOLT AND NO. 1 NUT.

INSTALL ASSEMBLY INTO LOCKER AND FASTEN
WITH (4) NO. 3 BOLTS AND NO. 1 NUTS.

OPERATION #5

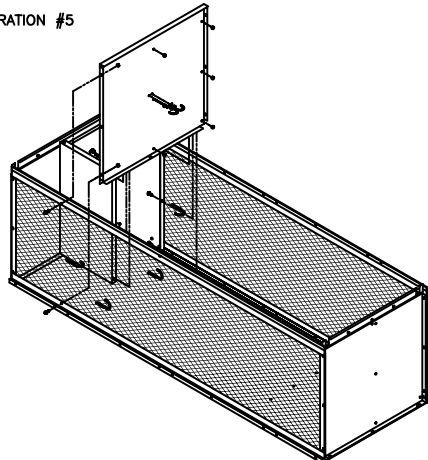


ATTACH DOUBLE PRONG HOOK TO SHELF
WITH (2) NO. 2 BOLTS AND NO. 1 NUTS

BOLT SHELF INTO LOCKER BY USING
NO. 1 BOLTS AND NUTS

BOLT COMPARTMENT SIDES TO SHELF
WITH (6) NO. 2 BOLTS AND NO. 1 NUTS


OPERATION #6

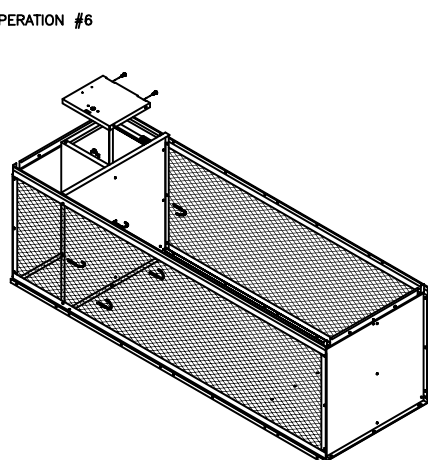

INSTALL LOCK-UP COMPARTMENT DOOR
BY FASTENING TO HINGES WITH
(2) NO. 2 BOLTS AND NO. 1 NUTS

ADJUST ALIGNMENT OF DOOR BEFORE
TIGHTENING BOLTS AND NUTS


OPERATION #7

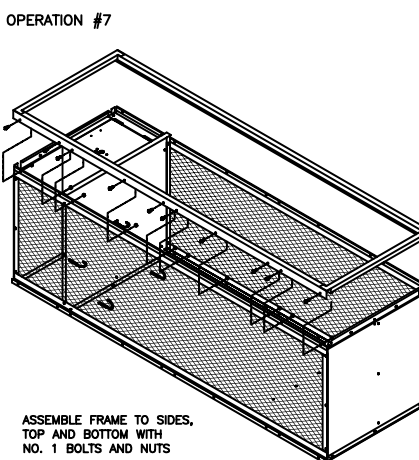

ASSEMBLE FRAME TO SIDES,
TOP AND BOTTOM WITH
NO. 1 BOLTS AND NUTS


OPERATION #8

ASSEMBLY OF BOTTOM
COMPARTMENT
ON BACK

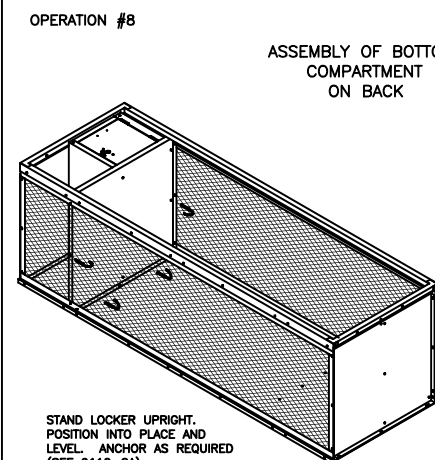

STAND LOCKER UPRIGHT.
POSITION INTO PLACE AND
LEVEL. ANCHOR AS REQUIRED
(SEE 9112-CA)

HARDWARE:



ASSEMBLY INSTRUCTIONS
FOR LOCKERS
WITH TOP & BOTTOM
LOCK-UP COMPARTMENTS

LYON WORKSPACE PRODUCTS
P.O. BOX 671 AURORA, IL 60007


REVISED
SERIES E-000007-01
E-001130-1

9122-CA

OPERATION #1

SEE ASSEMBLY INSTRUCTION 9112-CA FOR OTHER ACCESSORIES

NOTE:
IF LOCKER HAS UPPER
COMPARTMENT, START
ASSEMBLY ON OTHER
SIDE OF THIS
INSTRUCTION.

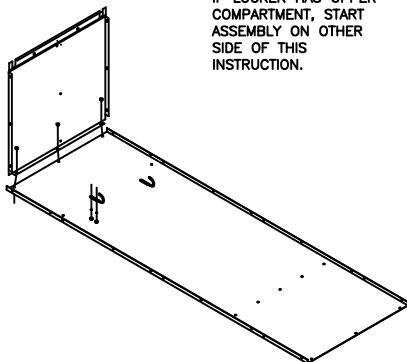


IF LOCKER HAS UPPER COMPARTMENT
ASSEMBLED AS SHOWN ON OTHER SIDE,
SKIP TO OPERATION #5

ATTACH HOOKS TO BACK WITH (2) NO. 1
BOLTS AND NUTS.

NOTE:
ONLY (1) HOOK REQUIRED ON 18" WIDE
(2) HOOKS REQUIRED ON 21" AND 24" WIDE

FASTEN TOP AND BOTTOM TO BACK
USING NO. 1 BOLTS AND NUTS

OPERATION #2

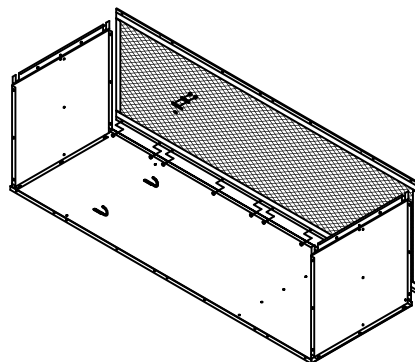


BOLT 2 SIDES TO BACK, TOP, AND BOTTOM
USING NO. 1 BOLTS AND NUTS.

ATTACH HOOK TO SIDE, ALIGNED WITH
HOOKS ON BACK. USE (2) NO. 1 BOLTS
AND NUTS WITH A COAT HOOK STRAP ON
THE BACKSIDE AS SHOWN.

NOTE:
FOR SECTIONIZING INFORMATION
REFER TO ASSEMBLY INSTRUCTION
9112-CA.


OPERATION #3

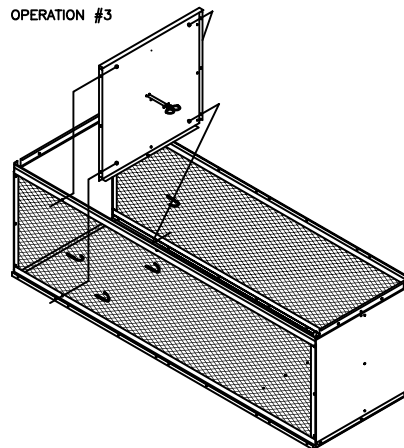

BOLT SHELF INTO LOCKER BY USING
NO. 1 BOLTS AND NUTS.


ATTACH DOUBLE PRONG HOOK TO SHELF
WITH (2) NO. 2 BOLTS AND NO. 1 NUTS.

OPERATION #4

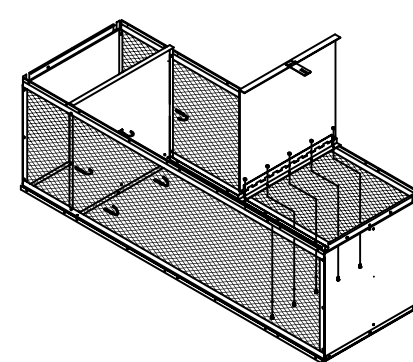


ATTACH LOWER COMPARTMENT LID TO LOCKER
BACK USING (5) NO. 1 BOLTS AND NUTS.

OPERATION #5

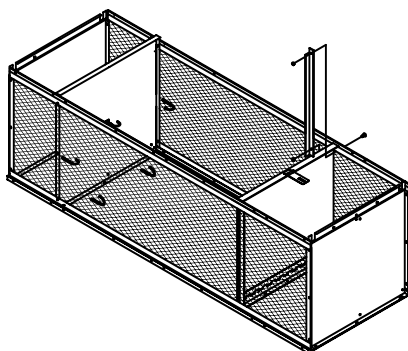

INSTALL COMPARTMENT LID SUPPORTS
WITH (4) NO. 3 BOLTS AND NO. 1 NUTS.


OPERATION #6

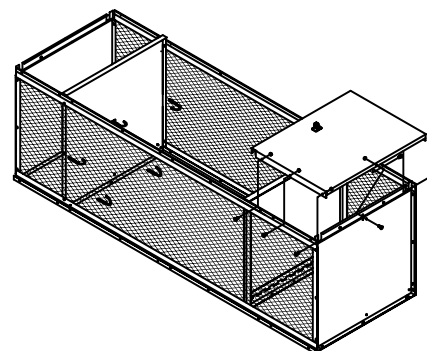

BOLT LOWER COMPARTMENT FRONT TO LOCKER
SIDES WITH (6) NO. 3 BOLTS AND NO. 1 NUTS.

FASTEN LOWER COMPARTMENT FRONT TO LOCKER
BOTTOM WITH (1) NO. 4 SCREW.


OPERATION #7

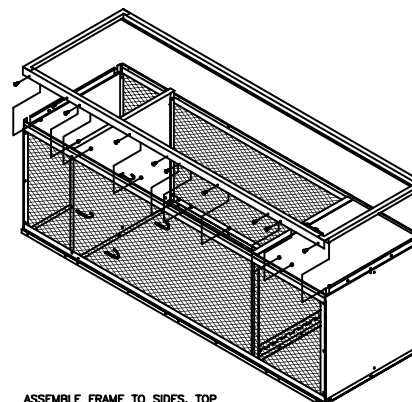

ASSEMBLE FRAME TO SIDES, TOP
AND BOTTOM WITH NO. 1
BOLTS AND NUTS.

OPERATION #8

ASSEMBLY OF UPPER
COMPARTMENT
ON FRONT

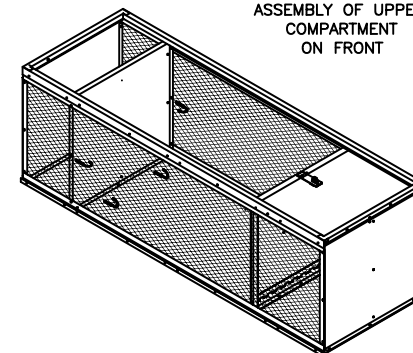

STAND LOCKER UPRIGHT, THEN
POSITION INTO PLACE AND
LEVEL. ANCHOR AS REQUIRED
(SEE 9112-CA)