

USE #10-24 MACHINE SCREWS WITH #10-24 NUTS TO BOLT DOUBLE PRONG HOOKS TO BACK PANEL AND DIAMOND PERFORATED SIDE PANELS. NEXT BOLT DIAMOND PERFORATED SIDES TO BACK PANEL. NOTE: SIDE PANELS ARE IDENTICAL.

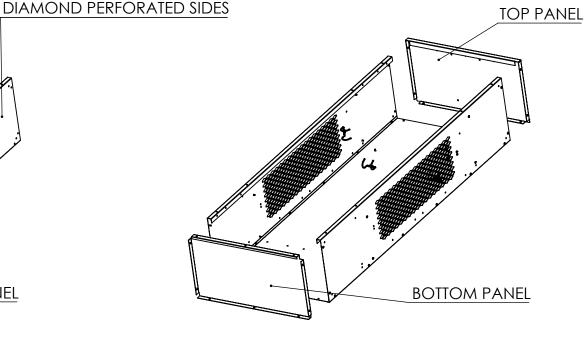


FIGURE. 2

BOLT TOP AND BOTTOM PANELS TO THE BACK AND SIDE PANELS. KEEP OVERLAPPING FLANGES FACING FORWARD.

NOTE: TOP PANEL HAS PUNCHING FOR OPTIONAL LOCKED COMPARTMENT.

FASTENERS SHOWN IN ACTUAL SIZE



#10-24 X 1/2 MACHINE SCREW



#10-24 NUT



#10-24 SELF TAPPING SCREW







REVISIONS DATE

9124-AA


SHEET 1 OF 5

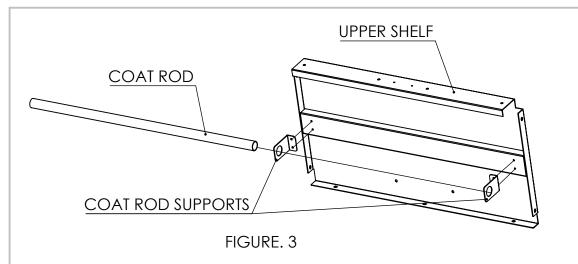

INSTALL COAT ROD SUPPORTS TO UPPER SHELF USING #10 X 5/16 SELF TAPPING SCREWS. SLIDE COAT ROD INTO COAT ROD SUPPORTS EYE HOLES.

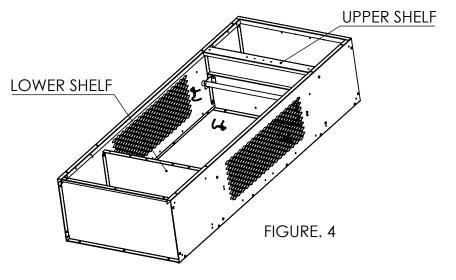

BOLT UPPER AND LOWER SHELVES TO BACK AND SIDE PANELS.

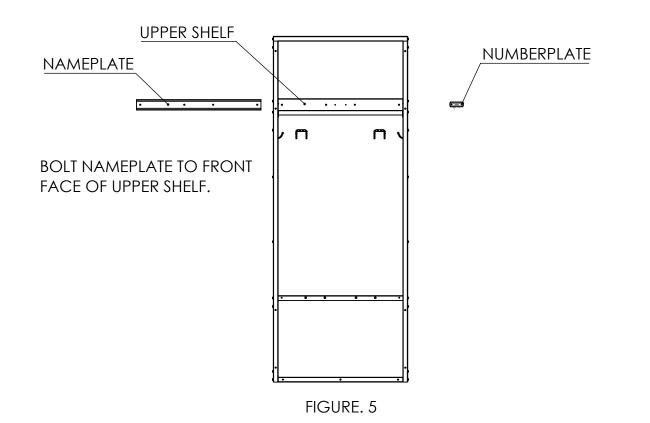




**OPTIONAL PRODUCT** 


NAMEPLATE CAN BE REPLACED WITH NUMBER PLATE.




## UPPER COMPARTMENT ASSEMBLY

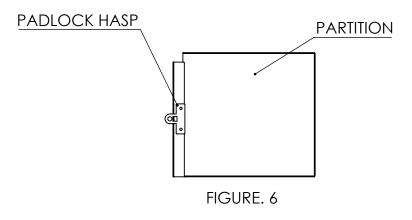

BOLT PADLOCK HASP TO PARTITION.

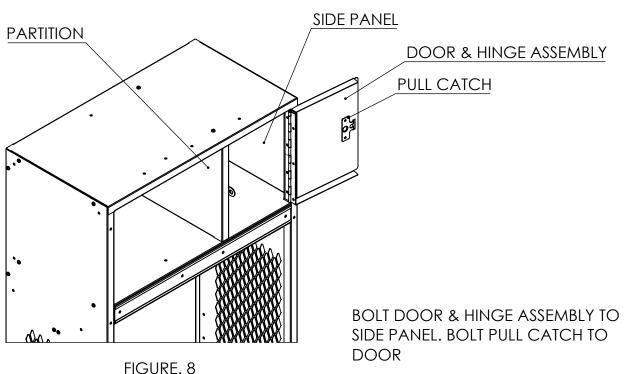


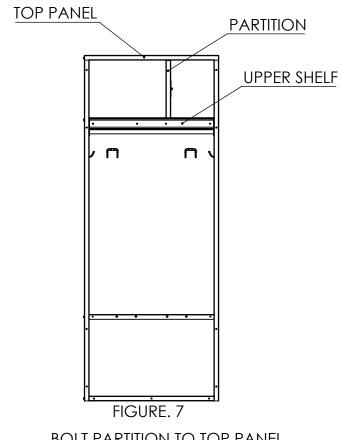


BOLT PARTITION TO TOP PANEL AND UPPER SHELF.



## LOWER COMPARTMENT ASSEMBLY

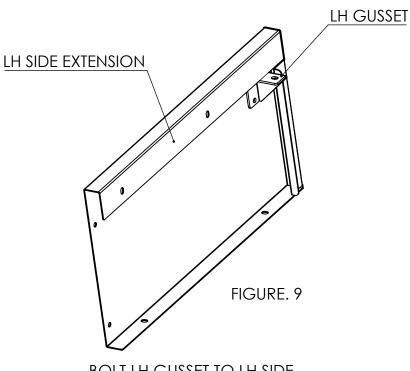


BOLT LH GUSSET TO LH SIDE EXTENSION. BOLT RH GUSSET TO RH SIDE EXTENSION

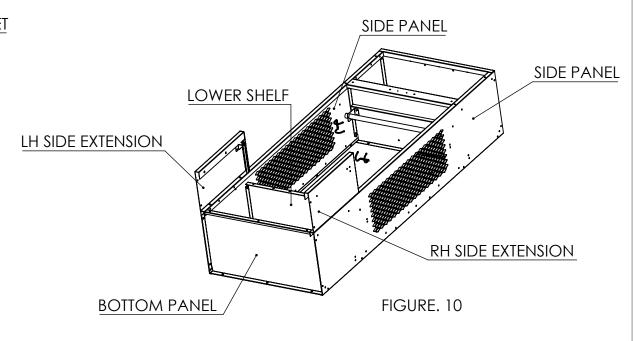


BOLT LH SIDE EXTENSION TO SIDE PANEL. BOLT RH SIDE EXTENSION TO

OTHER SIDE PANEL.

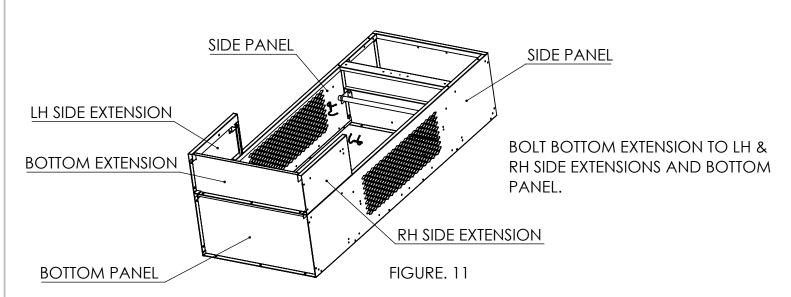



## LOWER COMPARTMENT ASSEMBLY CONTINUED

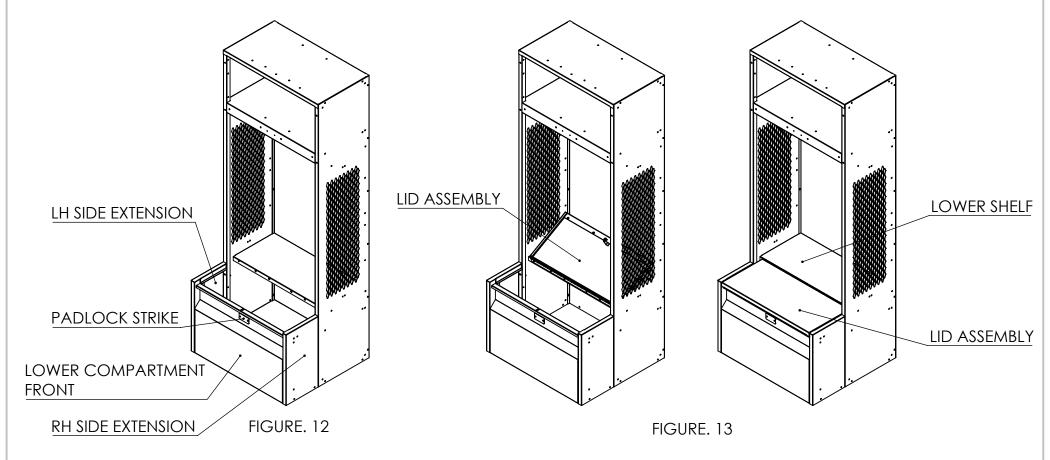

BOLT LOWER COMPARTMENT FRONT TO LH & RH SIDE EXTENSIONS AND LH & RH GUSSETS. BOLT PADLOCK STRIKE TO LC FRONT. BOLT LID ASSEMBLY HINGE TO LOWER SHELF.

