CABINETS <u>WITHOUT SIDE REINFORCEMENTS</u> MAY BE STACKED UP TO A MAXIMUM HEIGHT OF 180° HIGH AS LONG AS THE TOTAL LOAD DOES NOT EXCEED 15,000 lbs ON THE TOP OF THE BOTTOM CABINET. (Total load is the cabinet weight and its contents)

CABINETS <u>WITH SIDE REINFORCEMENTS</u> MAY BE STACKED UP TO A MAXIMUM HEIGHT OF 240° HIGH AS LONG AS THE TOTAL LOAD DOES NOT EXCEED 28,000 lbs ON THE TOP OF THE BOTTOM CABINET. (Total load is the cabinet weight and its contents)

Bottom cabinet must be leveled and securely anchored to floor and ganged to adjacent cabinets per owners manual.

Remove sufficient top drawers from the bottom cabinet, and bottom drawers or false bottom from the top cabinet for access. Mark specific locations of drawers and carriers for reinstallation.


## TOP CABINETS WITHOUT BASE CHANNELS

Remove two of the knockouts from the top of the battom cabinet using a screwdriver or similar tool. Place top cabinet on bottom cabinet and line up through holes from top cabinet to knock-outs on bottom cabinet. Attach with supplied hardware. Replace drawers and carriers and/or false bottom into specific locations and check for proper operation.

TOP CABINETS WITH BASE CHANNELS

If bottom cabinet was not ordered with item "240STK5", drill top of cabinet as shown below. Place top cabinet on bottom cabinet and align the holes in the base channels of the top cabinet with the holes in the top of the bottom cabinet. Attach with supplied hardware. Replace drawers and carriers and/or false bottom into specific locations and check for proper operation.


## TOP CABINETS WITHOUT BASE CHANNELS

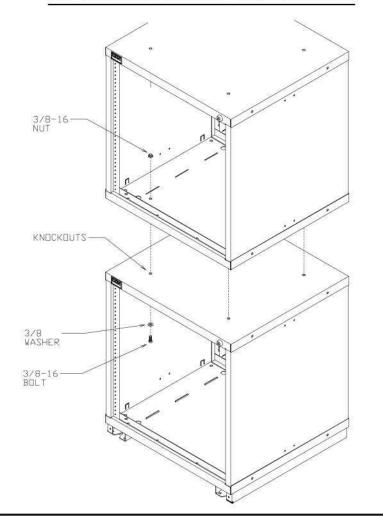

## TOP CABINETS WITH BASE CHANNELS

CABINET BOTTOM-

3 11/16"

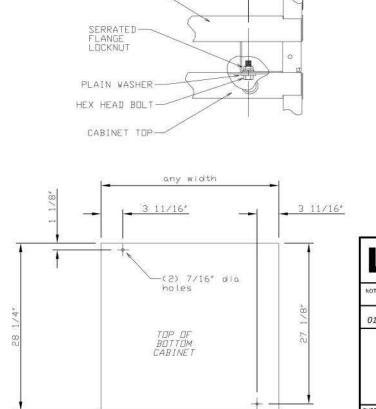

FRONT OF BOTTOM CABINET





(2) 3/8\*-16 x 1\* HEX HEAD BOLT

(2) 3/8" PLAIN WASHER



SUPPLIED FASTENERS

(2) 3/8'-16 SERRATED FLANCE LOCKNUT



- 10204AA

5