


HI-LO BRACKET INSTALL

MEASURE THE HEIGHT OF THE SHORTER CABINET OR PANEL LEG THAT THE WORKBENCH TOP WILL BE ATTACHED TO. LOCATE THE HI-LO BRACKET ON THE TALLER CABINET AS SHOWN AND MARK ON THE CABINET THE LOCATIONS WHERE THE 13/32" DIAMETER HOLES NEED TO BE DRILLED. BE SURE THAT THE HOLE REQUIRED NEAR THE BACK IS 5" FROM THE BACK OF THE CABINET. REMOVE REQUIRED DRAWERS AND CARRIERS AND DRILL TWO HOLES. MOUNT THE HI-LO BRACKET AND BACKUP PLATE WITH SUPPLIED HARDWARE. THE CARRIAGE BOLT SQUARE WILL FIT INTO THE SQUARE CUTOUT IN THE HI-LO BRACKET. TIGHTEN AND REPLACE DRAWERS. ATTACH WORKBENCH TOP TO HI-LO BRACKET.

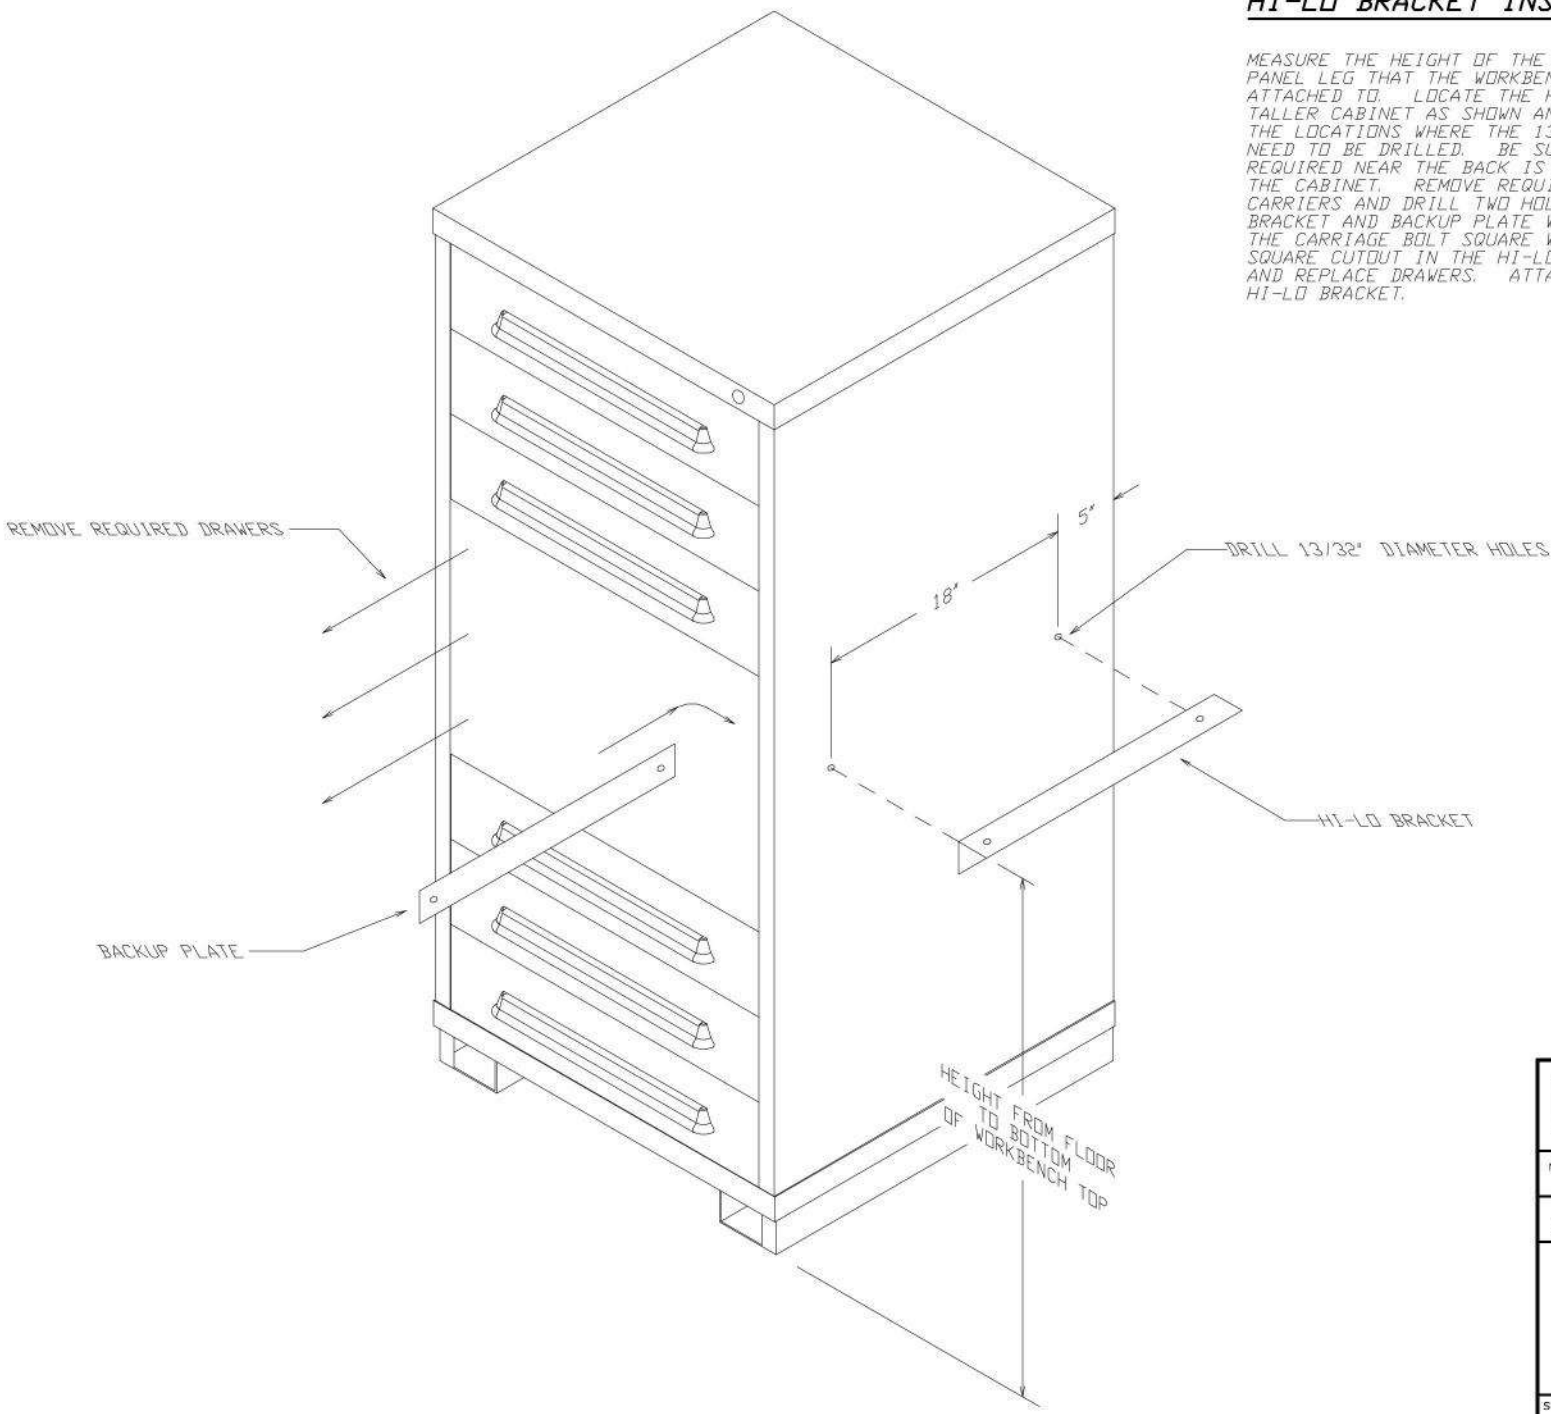

| | | | |
|---|---------------------------------|--|----------|
| LYON | | P.O. Box 671 AURORA, IL 60507-0671 PHONE: 630-852-8941 FAX: 800-367-6681 | |
| | | NOTICE: THIS IS A CONFIDENTIAL DISCLOSURE LOANED BY LYON WORKSPACE FOR REFERENCE PURPOSES ONLY | |
| DATE 01-31-12 | DRAWN BY JR | CHECKED BY DWV | |
| DESCRIPTION INSTALLATION HI LO BRACKET MDC | | | |
| SHEET - | DRAWING NUMBER SS1549 | | REV 1 |