## TWO TOPS TO ONE CABINET 5/16° dia holes (4) FLAT WASHER LAG SCREW

## TOP ATTACHMENT for TWO TOPS to CABINET

Remove sufficient top drawers and carriers and mark for reinstallation.


Drill four (4) 5/16' diameter holes on the top of the Cabinet as shown.

Drill two (2) 13/64' diameter 1' deep holes on each underside of the Tops as shown.

Align the holes in the top of the Cabinet with the holes in the Tops. Attach with the 1/4° Lag Screws and 1/4° Flat Washers. (Lubricate the screw threads prior to assembly).

Replace drawers and carriers into specific locations and check for proper drawer operation.

## TWO TOPS TO ONE PANEL LEG

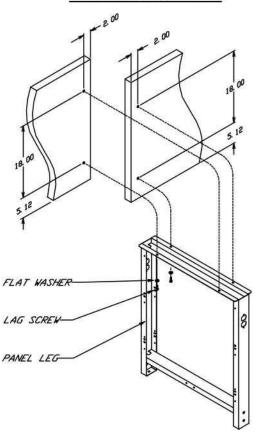

## TOP ATTACHMENT for TWO TOPS to PANEL LEG

Drill two (2) 13/64' diameter 1' deep holes on each underside of the Tops as shown.

Align the holes in the top of the Panel Leg with the holes in the Tops. Attach with the 1/4' Lag Screws and 1/4' Flat Washers. (Lubricate the screw threads prior to assembly).



P.O. Box 671 AURORA, IL 60507-0671 PHONE: 630-892-8941 FAX: 800-367-6681

NOTICE: THIS IS A CONFIDENTIAL DISCLOSURE LOANED BY LYON WORKSPACE FOR REFERENCE PURPOSES ONLY

07-19-12

DRAWN BY

DWV


DESCRIPTION

INSTALLATION OPEN/CLOSED PANEL LEG MDC

SHEET

SS1870

1

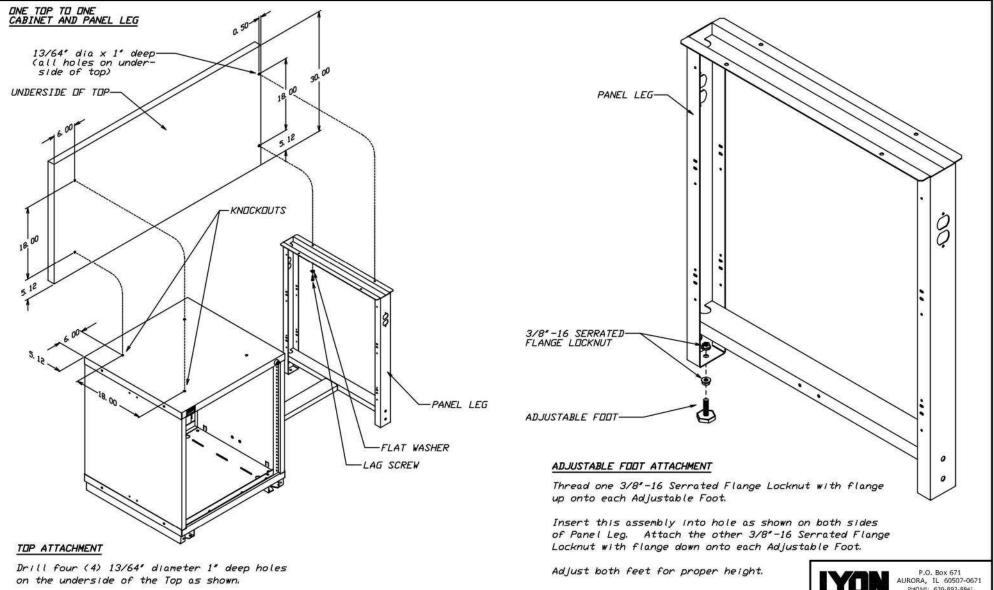

Punch Knockouts as shown in top of cabinet and remove sufficient top drawers and carriers and mark for reinstallation.

Align the holes in the top of the Cabinet and Panel Leg with the holes in the Top. Attach with the 1/4" x 1" Lag Screws and 1/4" Flat Washers. (Lubricate the screw threads prior to assembly).

Replace drawers and carriers into specific locations and check for proper drawer operation.



PHONE: 630-892-8941



ADJUSTABLE FOOT

1/4" FLAT WASHER

SUPPLIED HARDWARE

NOTICE: THIS IS A CONFIDENTIAL DISCLOSURE LOANED BY LYON WORKSPACE FOR REFERENCE PURPOSES ONLY

DRAWN BY CHECKED BY 07-19-12 DWV

DESCRIPTION

INSTALLATION OPEN/CLOSED PANEL LEG MDC

DRAWING NUMBER SS1870

1