
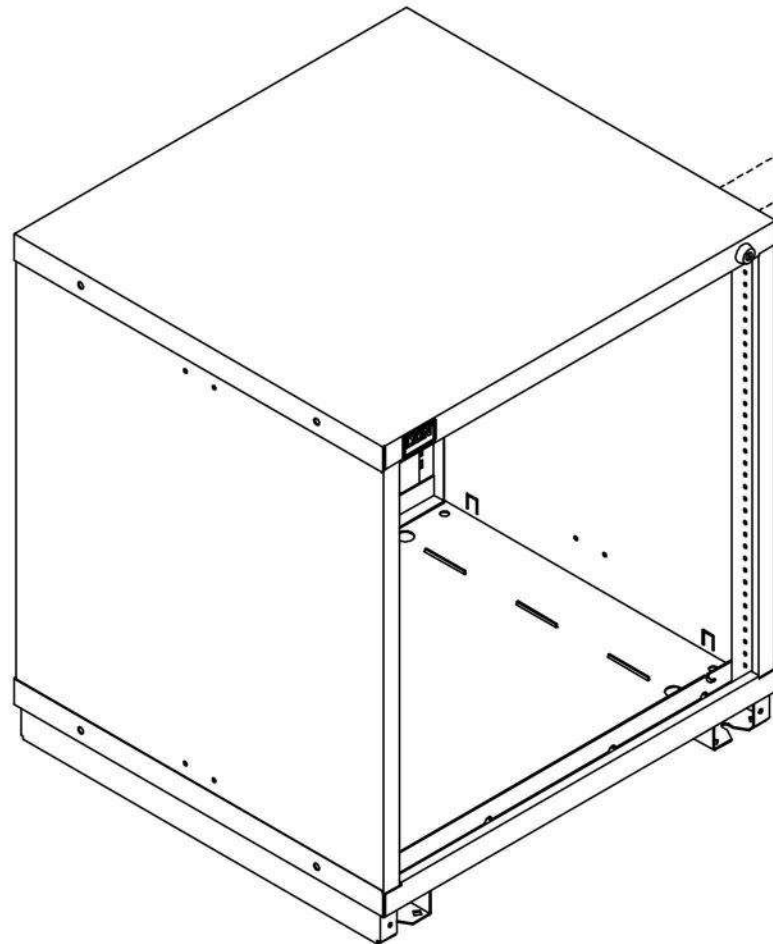


CABINET DRILL PATTERN
(RIGHT SIDE SHOWN)

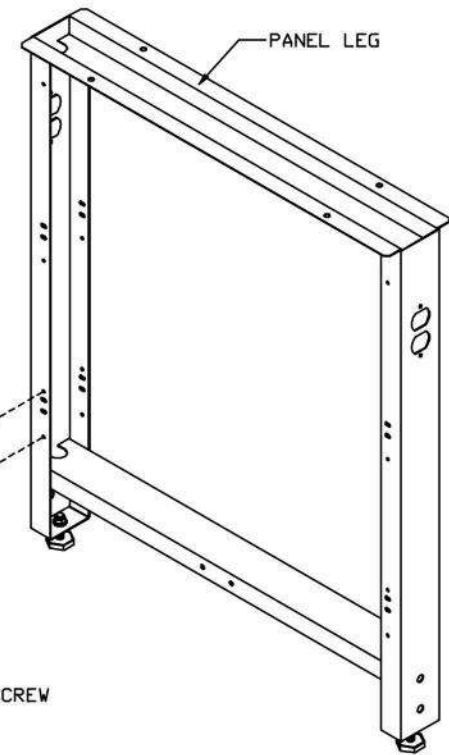

ASSEMBLY INSTRUCTIONS

DRILL TWO (2) 0.166 DIAMETER HOLES ON THE SIDE OF THE CABINET WHICH IS TO ACCEPT ATTACHMENT OF THE STRINGER PER DRILL PATTERN SHOWN ABOVE.

ATTACH STRINGER TO CABINET AND PANEL LEG AS SHOWN WITH SUPPLIED #10-24 THREAD CUTTING SCREWS. FOUR (4) SCREWS WILL BE REQUIRED FOR ALL CABINETS.

LYON

P.O. Box 671
AURORA, IL 60507-0671
PHONE: 630-892-8941
FAX: 800-367-6681

NOTICE: THIS IS A CONFIDENTIAL DISCLOSURE LOANED BY LYON WORKSPACE FOR REFERENCE PURPOSES ONLY

DATE 07-19-12	DRAWN BY JR	CHECKED BY DWV
------------------	----------------	-------------------

DESCRIPTION INSTALLATION STRINGER MDC		
---	--	--

SHEET 1	DRAWING NUMBER SS1873	REV 1
------------	---------------------------------	----------



SUPPLIED HARDWARE